INSTRUCTIONS FOR THE USE AND CARE OF ZANUSSI DISHWASHER

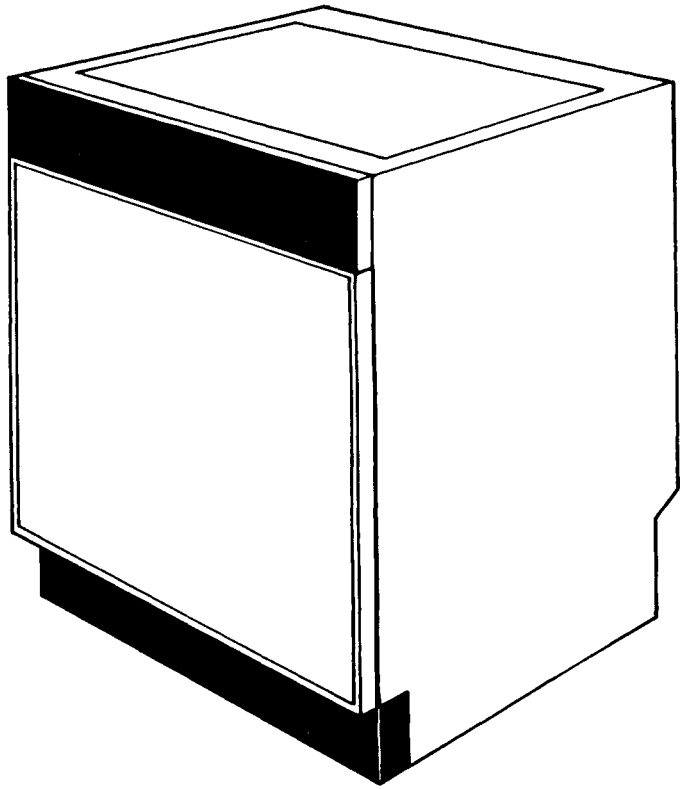

MODEL No. DI 110 TCR/C

ZANUSSI

The appliance of science

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can be acquainted with the functioning of the appliance and the relevant warnings.

Dishwasher warnings

THESE WARNINGS ARE PROVIDED IN THE INTEREST OF SAFETY. YOU MUST READ THEM CAREFULLY BEFORE INSTALLING OR USING THE APPLIANCE.

Unplug the appliance and turn off the water after use.

Any plumbing work to install this appliance should be carried out by a qualified plumber or competent person.

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

This appliance is designed to be operated by adults. Children should not be allowed to tamper with the controls or play with the products.

This product should be serviced by an authorised Zanussi Network Service Centre, and only genuine Zanussi spare parts should be used.

It is dangerous to alter the specifications or modify the product in any way.

Care must be taken to ensure that the appliance does not stand on the electrical supply cable.

Zanussi dishwashers are designed to be used for washing normal household utensils. Items that are contaminated by petrol, paint, steel or iron debris, corrosive, acidic or alkaline chemicals are not to be washed in a dishwasher.

When finishing loading or unloading close the door, as an open door can be a hazard.

If your house is fitted with a water softening unit, it is not necessary to add salt to the water softening unit in the dishwasher.

Do not put in your dishwasher: Cutlery with wooden or horn handles or glued parts, bronze cutlery, saucepans with wooden handles unless they are sold as dishwasher proof, aluminium ware, crystal ware, leaded glass, plastic articles unless sold as dishwasher proof, antique china or fine decorated china unless sold as dishwasher proof. Always check with the manufacturer of the item if in any doubt.

A chemical reaction can occur between silver cutlery and stainless steel cutlery. As a precaution do not wash together.

Under no circumstances should you open the door whilst the appliance is in operation. Always turn off the appliance before opening the door.

Care should be taken when cleaning the bottom door seal and hinge area as any exposed metal edges may cut if care is not observed.

Built-in dishwashers only: The appliance must be secured to the underside of the worktop using the brackets provided. Failure to do this could result in an unstable appliance which may cause damage or injury.

Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons may cause injury or more serious malfunctioning. Refer to your local Zanussi Network Service Centre. Always insist on genuine Zanussi spare parts.

Contents

Page 5 Specifications
7 Installation
10 Using your machine
13 Loading your machine
17 User instructions
18 Programme selection
20 Taking care of your machine
22 Making the most of your machine
23 Servicing
25 Building-in features
30 ZANUSSI Service Force
36 ZANUSSI guarantee conditions

Please note that the specifications of your appliance may differ slightly from thos shown in this leaflet.

Specifications

Width	600 mm 23.6"
Overall depth	570 mm 22.4"
Overall depth with door open	1150 mm 45.2"
Height	820 mm 32.2"
Capacity (IEC place settings)	12
Supply voltage	220/240 V 50 Hz
Motor rating During washing	200 W
Heater element	2570 W
Maximum power absorbed	2770 W
Water supply pressure Minimum	7 psi 49 kN/sq.m.
Maximum	110 psi 758 kN/sq.m.

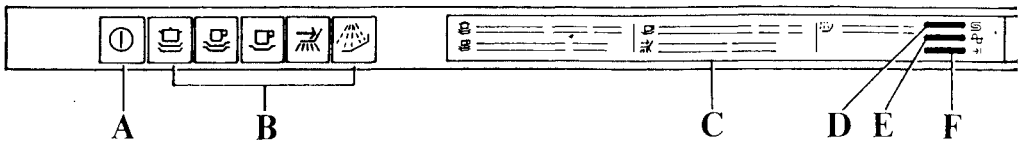

A - On/Off button
B - Programme selector buttons
C - Programme guide
D - Salt refill indicator light
E - Mains on indicator light
F - «End of programme» indicator light

Please note that the external appearance of your appliance may differ slightly from that shown in the instruction book.

Installation

Positioning

After removing the outer carton, position the appliance in the selected spot, preferably in the immediate vicinity of the water supply and drainage facilities. The appliance may be inserted under a kitchen furniture worktop or under the sink drainage board (see Page 25). It is unnecessary to allow any ventilation space around the appliance. However, it is important that it is not fitted too tightly between the other kitchen components as to prevent it from being easily removed for servicing. The dishwasher is equipped with filling and drainage hoses which can be turned to the right or left (Fig. 1) to suit the installation site. This is done by loosening the ring-nut which fastens the hose to the machine. Then reposition the hose and re-tighten the ring-nut to prevent leakage.

Plumbing

This appliance has a single water inlet valve with a female 3/4" BSP thread connector. The appliance may be fed with either hot or cold water. However, the use of a cold water supply is more economical and provides better washing results as hot water is required only for the Main Wash and the Final Rinse.
A variety of connectors is available from good hardware and hydraulic supply stores which satisfy most domestic plumbing needs. If modifications in your plumbing are required, consult only qualified plumber or the competent authorities.
Before connecting the dishwasher, make sure that the water pressure is contained within the limits specified in the Technical Data listed on Page 5.

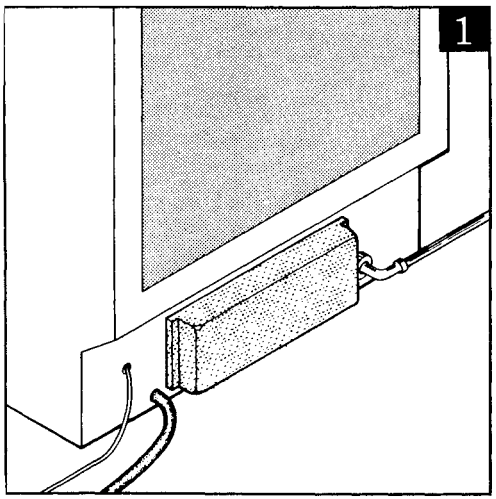

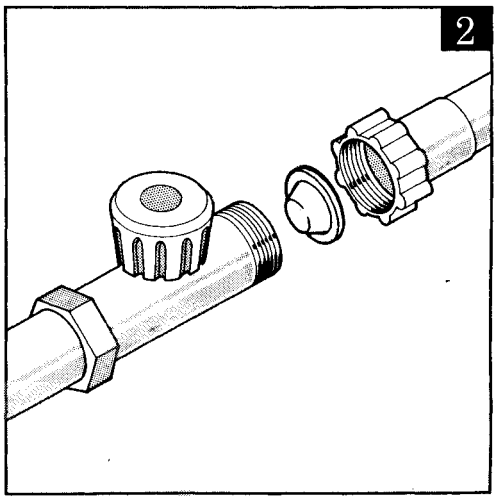

If you decide to make this connection to a hot water source, make sure that the temperature never exceeds 70 degrees Centigrade (158 degrees Fahrenheit).
Your local Water Board will inform you of the average mains pressure in your area. When the water is supplied via a cold water storage cistern or a hot water cylinder, you can work out the pressure for yourself in both cases by measuring the vertical distance (or «head») between the machine's inlet hose, and the cold water storage cistern outlet, allowing approximately 1 p.s.i. for every 2.35 feet (a minimum 16.5 foot head is required).
Before connecting the hose, make sure to connect the mesh filter supplied with the machine (Fig. 2).

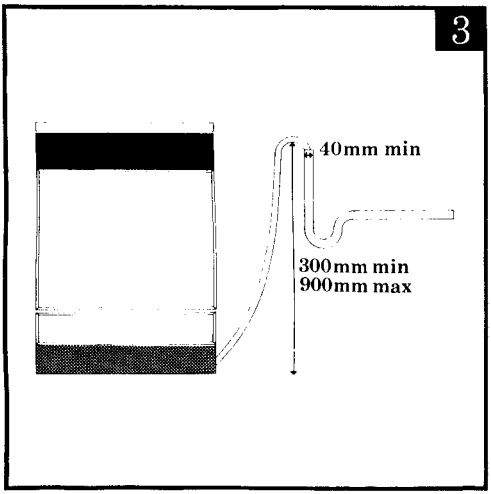

Waste connections

Care must also be taken over the disposal of the waste water from the machine. If your dishwasher is not to be permanently «plumbed in», merely hook the curved end of the drain hose firmly over the edge of the kitchen sink, having made sure that the sink is empty, and that the waste outlet is not blocked.
Otherwise, fit a P-trap and stand-pipe assembly like that in figure 3 (ensure the pipe has an internal diameter of at least 38 mm (1½ ins), and hook the drain hose into that). In this case ensure that there is an air gap between the hose and the inside of the pipe to prevent the risk of dirty water being syphoned back into the machine, and check that the top of the stand-pipe is between 300 and 900 mm above floor level. In addition, make sure that the stand-pipe/trap assembly discharges into the same soil system as the kitchen sink.
With the machine in its permanent position, do check that the drain hose is not kinked, or squashed in such a way as to obstruct the flow of water.
Do not extend the drain hose.

Electrical connections

WARNING: THIS APPLIANCE MUST BE EARTHED. The manufacturer declines any liability should this safety measure not be observed.
If the plug that is fitted to your appliance is not suitable for your socket outlet, it must be cut off and the appropriate plug fitted.
The cut off plug should be disposed of to prevent the hazard of electric shocks in case it should be plugged into a 13 Amp socket in another part of your home.

IMPORTANT: The wires in this mains lead are coloured in accordance with the following code:
GREEN AND YELLOW - EARTH
BLUE - NEUTRAL
BROWN - LIVE

If you fit your own plug, the colours of the wires in the mains lead of your appliance may not correspond with the markings identifying the terminals in your plug, this is what you have to do:
Connect the green and yellow (earth) wire to the terminal in the plug which is marked with the letter «E» or the earth symbol ⏚, or coloured green, or green and yellow. Connect the blue (neutral) wire to the terminal in the plug which is marked with the letter «N» or coloured black.
Connect the brown (live) wire to the terminal which is marked with the letter «L» or coloured red.

The plug moulded on to the cord incoporates a fuse. For replacement use a 13 Amp BS 1362 fuse. Only ASTA approved fuses should be used.
The fuse cover/carrier must be replaced in the event of changing fuse. The right fuse cover/carrier colour is the one shown by the coloured insert at the base of the plug or is the colour of the inscription at the base of the plug.

The plug must not be used if the fuse cover/carrier is lost.

A replacement cover/carrier must be obtained from Zanussi Service Agents whose addresses are listed on the attached «Zanussi Service and Spares Nationwide».

THIS APPLIANCE COMPLIES WITH E.E.C. DIRECTIVE NO. 87/308 OF 2.6.87 RELATIVE TO RADIO INTERFERENCE SUPPRESSION.

Using your machine

Open the machine by pulling the handle of the furniture door outwards.
To close the door push it back until you feel it clicks

Water Softening

The dishwasher has a completely automatic water softener fitted to it and you only need to refill the salt container with coarse salt after approximately 40 washes.

The water softener stops limescale and mineral salts from entering the wash water thus preventing whitish marks appearing on the crockery.

Softened water improves the cleaning action and, after rinsing, the crockery and glassware should look clean and shining.

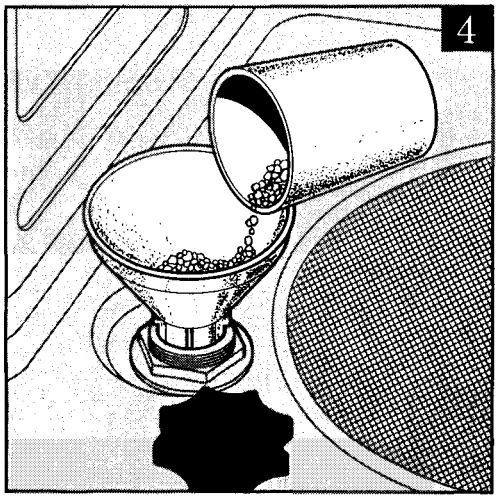

Filling the Salt Container

Prior to using the dishwasher for the first time it is necessary to fill the salt container with water in order that the initial loading of salt is dissolved.
To do this open the door and slide out the bottom basket. Unscrew the cap in the base of the dishwasher (fig. 4) and, using the funnel supplied fill the salt container with water. Next (again using funnel) pour into the same container 1.5 Kg (3 lb) of coarse salt.

Replace the cap making sure that there is no trace of salt on the thread of the screw or on the gasket. Screw the cap on tightly.

Use only coarse salt (which is often available from garden centres) or salt sold specifically for dishwashers. Always refill the container immediately before starting a complete wash cycle, (not before Rinse and Hold) so that any salt granules or salt water which may flow out of the container (which will always have some water in it) during the refilling will not remain on the bottom of the tub without being properly diluted.

Salt refill indicator

This model features a refill indicator light on the control panel. When it lights up, which will be approximately every 40 washes, the water softener needs refilling with salt.

Adjusting the Water Softener

Water hardness will vary according to the area in which you live. The more limestone and mineral salts your water contains, the harder it will be. Ask your local Water Board to tell you the degree of water hardness in your area.

This appliance is fitted with Water Softening Unit which the user may adjust to suit his or her own needs.
It is preset for water having a maximum hardness of 27 Clarke degrees.
This setting is designed to suit most of the field requirements.
If the water hardness exceeds 27 Clarke degrees (up to a maximum of 42 Clarke degrees), proceed as follows:

slide out the lower basket and unscrew the cap of the salt container.

With a screw-driver or a knife turn by 180° anti-clockwise the 2-positions selector from position — to position +.

Rinse Aid

This special liquid is essential for good results. It ensures quick drying and shiny crockery and glass by helping the water to run smoothly off the items before the salts contained in the water can leave streaks and stains.
The rinse aid dispenser, which automatically dispenses the right amount of liquid at the right time during the programme, is located inside the door of the machine next to the detergent dispenser (see Fig. 6).
To fill the dispenser press the catch A (Fig. 7) to open the lid. Pour the rinse aid into the funnel situated under the lid. The container holds approximately

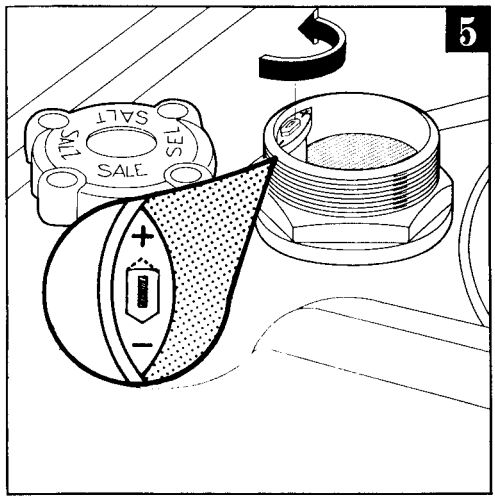

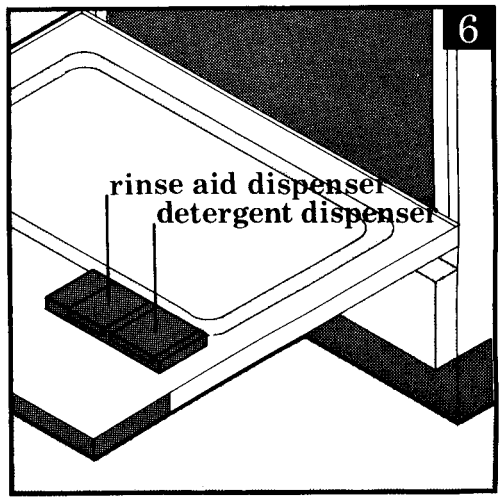

110 cc of rinse aid, which will last for about 20 wash cycles.
To the left of the dispenser there is an indicator which reads «Maximum and Minimum» to show the level of liquid in the dispenser («B», Fig. 7).

Adjusting the Quantity of Rinse Aid

It may be necessary to adjust the quantity of rinse aid that the machine dispenses if you live in an area with either very hard or very soft water. More rinse aid is needed for hard water and less rinse aid for soft water. On the funnel beneath the rinse aid dispenser lid is a control which is graded from 1-4 (Fig. 8). Leave this control set at position «1» when first using the machine, and adjust it only after you have noticed any of the following conditions:

A - If the crockery looks dull and/or shows occasional round spots, increase the quantity of rinse aid by turning the control («C», Fig. 8) towards the «4» position.

B - If the crockery feels sticky or shows whitish spots, decrease the quantity of rinse aid by turning the control («C», Fig. 8) towards the «1» position.

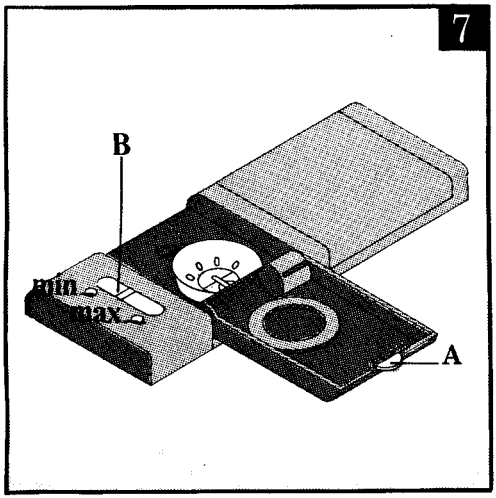

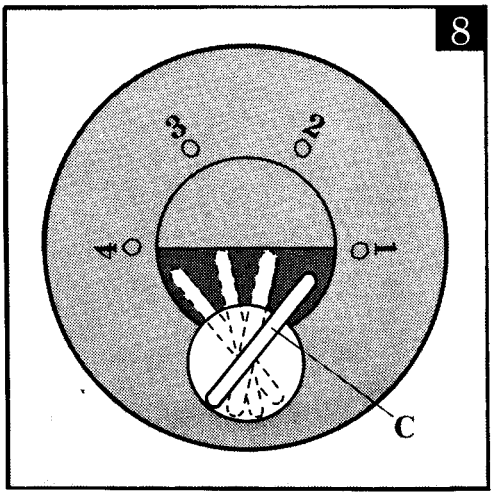

Loading the Machine

Most tableware, cutlery and cookware can be safely washed in the dishwasher.
Check the list on page 22 and do not put these items in the machine.
Remove bigger scraps of food from the plates and dishes; eg small bones, fish bones, scraps of meat and vegetables — in fact anything that can be scraped off easily. This will prevent the filter from clogging. There is no need to rinse the crockery before putting it in the machine.

Open the dishwasher by pulling the furniture door handle outwards.
Slide each basket out to load it.
The lower basket is designed to take dinner plates (up to 27 cm — 10.6 ins — diameter), serving dishes, cooking bowls, pots, pans and cutlery. Cutlery should be put in the removable cutlery basket.
Mix spoons with knives and forks so that they will not stick together and prevent the jets of water cleaning them properly. Unless your cutlery has very thin handles, put it in the basket with the handles downwards. If the handles are so thin that they stick through the bottom of the basket, load them with the handles upwards. The two diagrams (fig. 9 and 10) show how items can be arranged in the bottom basket.

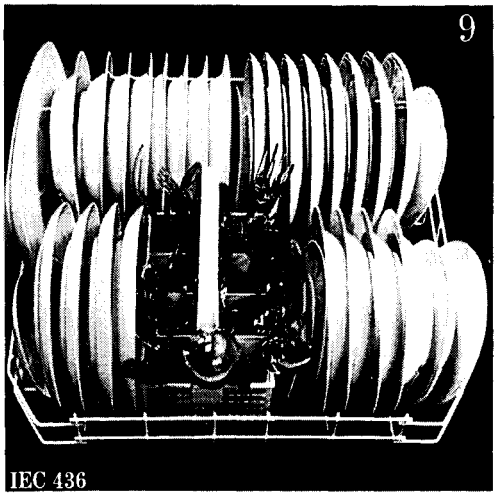

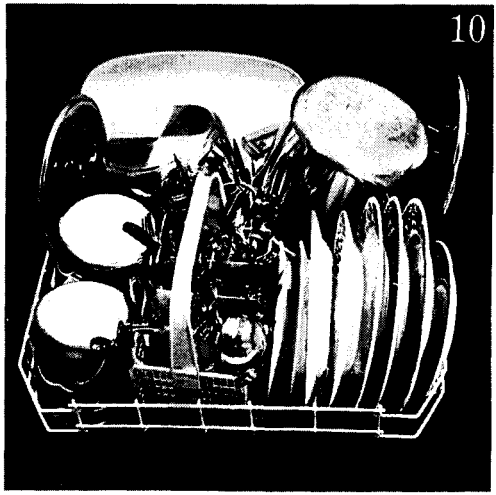

The top basket is designed to take dessert plates, tea plates, saucers, soup plates (up to 24 cm — 9.4 ins — diameter), serving dishes, cups, mugs and glasses. The two diagrams (fig. 11 and 12) show how items can be arranged in the top basket.

Important
Be absolutely sure not to load the crockery in such a way that it obstructs the water inlet funnel at the centre of the basket.

After loading make sure that the spray arm can turn freely.

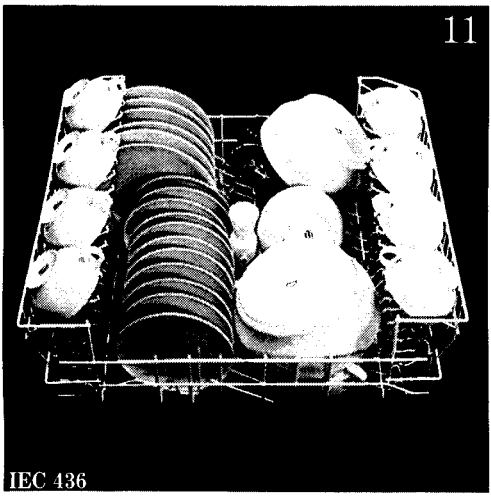

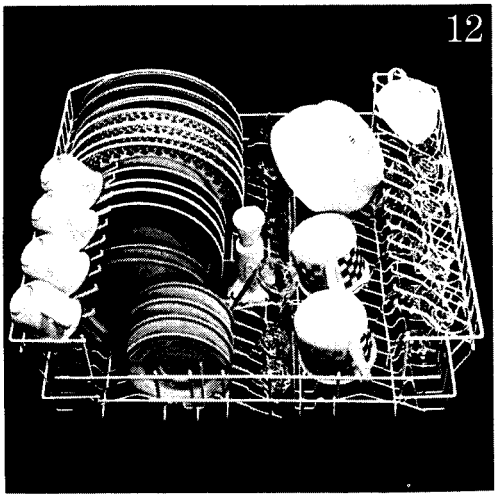

Raising and Lowering the Top Basket

If you have plates over 27 cm (10.6 ins) diameter and up to 31 cm (12.2 ins) the top basket must be raised to a higher position to accommodate them. The large plates can then be stacked in the lower basket. To do this move the front runner stops of the top basket (A-fig. 13) outward and remove the basket. Place the basket on the higher position and replace the front stops in the original position.

Note: When the top basket is in the higher position, it will only take plates up to 19 cm (7.5 ins) diameter and you will not be able to use the raised cup section.

Reversible Top Spray Arm

The Upper Spray Arm of this appliance can be reversed so that all the water is directed into the lower basket. This provides an intensive washing zone in the lower basket for the washing of heavily-soiled crockery, pots and pans. This means that the top basket cannot be used when the Upper Spray Arm has been reversed.
To reverse the Upper Spray Arm, unclip the plastic clip holding the spray arm in position (Fig. 14) and remove it. Refit the Spray Arm in the reverse position (with the holes facing down). Remember to return the Spray Arm to its original position (with the holes facing up) when the programme has been completed.

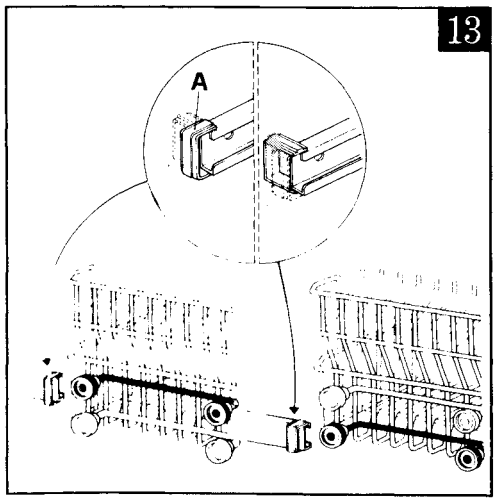

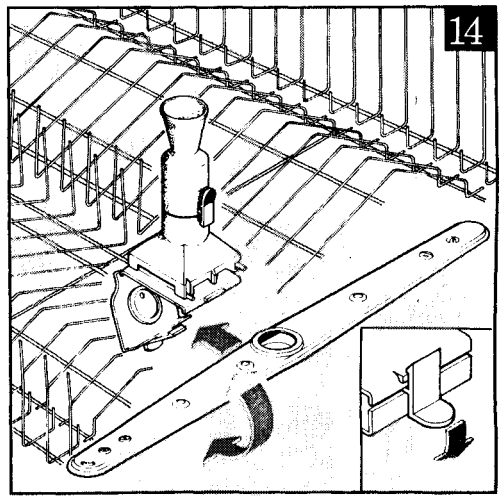

Choosing the Right Detergent

Use only top quality detergent specially made for dishwasher.

Filling with Detergent

Add the detergent after loading the machine. To do this open the detergent compartment on the inside of the door by pushing back the lid catch E (fig. 15). Pour the detergent into the compartment. Close the lid firmly. The detergent will be automatically dispensed at the right time.

Quantity of Detergent

This depends on the brand you use, on the degree of soil and the type of load.

Follow the directions on the powder packet.

As a guide use:
3 tsps (20g) for normal loads
4 tsps (24g) for heavily soiled load.

If you don't use enough powder the results will be poor, on the other hand too much powder will not improve results and will just be wasted. You will soon find out the right amount to add after using the machine for a few days.

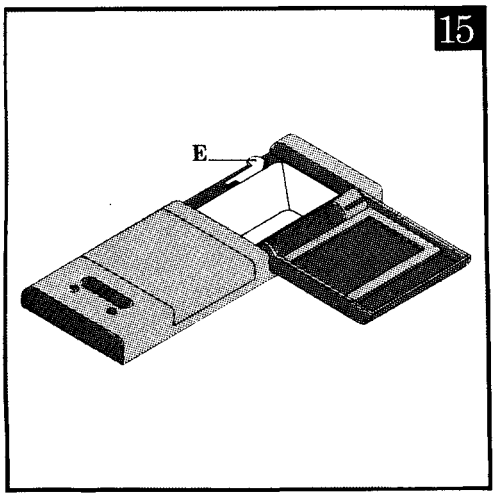

User instructions

Getting to know your machine

Controls and How to Use Them (see diagram page 6)

This dishwasher is fully integrated, designed to be hidden completely behind a furniture door. The controls for this appliance are positioned on the top of the dishwasher door; the door needs to be partially opened in order to use the controls.

A - On/Off Button

Press to start, press to switch off.
To cancel an incorrect selection, turn the machine off by depressing the On/Off Button.

B - Programme Selector Buttons

There are 5 programme buttons for the five main programmes on the machine.

C - Programme Guide

This guide shows the different wash programmes available on this appliance. For a detailed explanation of the programmes see the Wash Programme Guide on Page 19.

D - Sal Refill Indicator Light

The indicator shows when the salt container needs refilling (see page 10).

E - Mains-on Indicator Light

This light will come on when the On/Off button is pressed and the machine starts to operate. It will not go out until the switch is pressed to turn the machine off, once the dishwashing cycle has been completed.

F - End of Programme Indicator Light

It indicates that the wash cycle has finished.

Programme Selection

The chart on page 19 gives details of the programmes which your machine is designed to carry out. You will soon discover which programmes suit your type of washing up.
If you partially load the machine and want to make up a full load later in the day after another meal, use the rinse and hold programme.

Starting the Machine

The dishwasher is fully-integrated and designed to be hidden completely behind a furniture door. The controls for this appliance are positioned on the top of the dish-washer door. The door must be partially opened for the controls to be used.

1. Push the ON/OFF Button (A) to switch the appliance on.

2. The Indicator Lights (E) (F) will come on.

3. Depress the button (B) which corresponds to the programme you have selected, until the indicator light (F) goes out.

4. Close the door; the machine will begin operation.

Stopping the Machine

At the end of the programme, an audible signal will sound which will last for about 15 seconds. This is to tell you that the programme is finished.

Open the door (the «Programme End» Indicator light (F) will be on) and push the ON/OFF Button (A) to switch the appliance off.
If you need to stop the dishwasher at any moment during the wash cycle, switch the appliance off at the plug; open the dishwasher and push the ON/OFF Button (A).
To cancel a wash programme in progress, select the «Rinse and Hold» Programme.
The machine will discharge the water in a short time and will stop automatically. A new programme may then be selected.

At the end of a selected programme, the water and electricity supplies should be turned off to ensure complete safety when the machine is left unattended.
If the appliance is able to be operated on the Electricity Board's (Economy) system then you should turn off the water and electricity supplies as soon as possible upon completion of the selected programme.

Warning

Do not open the door while the machine is operating. A safety device has been incorporated which automatically stops the machine if the door is opened accidentally.

Emptying the baskets

You are advised to empty the lower basket first and then the upper one. This will avoid any drops of water falling from the upper basket onto the contents of the lower basket.

Washing programmes

Pro-gramme	Type of load and degree of soil	Recommended programme	Buttons to be depressed	Cycle description
1	Normally soiled crockery, pots, pans and cutlery, with a normal quantity of food scraps	Universal with prewash		Cold prewash / Main wash up to 65°C / 1 cold rinse / 1 hot rinse / hot air drying
2	Lightly soiled crockery, pots and cutlery	Economy with prewash		Cold prewash / Main wash up to 55°C / 1 cold rinse / 1 hot rinse / hot air drying
3	Lightly soiled dishes and glasses with delicate decorations	Economy no prewash		Main wash up to 55°C / 1 cold rinse / 1 hot rinse / hot air drying
4*	Lightly soiled crockery	Quick wash		Main wash up to 55°C / 2 cold rinses
5	Partial load (to be completed later in the day)	Rinse & hold		Cold rinse to prevent food scraps from drying up and sticking to the dishes

* **Note:** This is a special programme to wash in a short time (approx. 26 minutes) a full load of lightly soiled dishes, glasses and crockery (except pots) so that you may re-use them promptly. Due to the shortness of this programme, no drying phase is provided.

Taking Care of Your Machine

Important
Make sure that the machine is unplugged and the water turned off before undertaking any kind of maintenance.

Please note, when moving house make sure that the machine is not tilted too much during transport.

General Cleaning

Inspect the filters and spray arm nozzles regularly and remove any food scraps. Wipe round the rubber gasket at the bottom of the door to remove grease which tends to collect there.

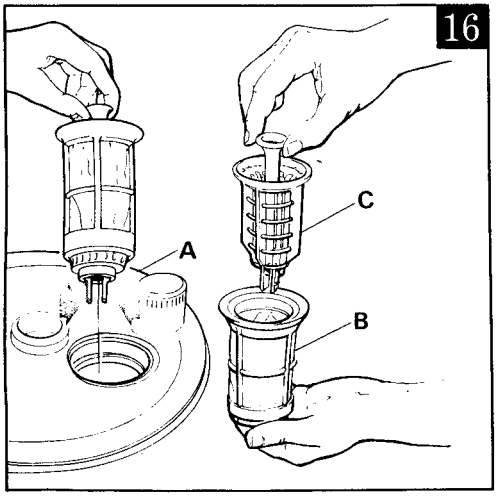

Cleaning the Filters

It is essential to clean the filter system regularly. It can easily get clogged with scraps of food which will cause the machine to work inefficiently.
There are three filters (see fig. 16 below), one large circular fine-mesh filter (A) and two small cone-shaped ones (B & C).
Inspect, and if necessary clean, the cone shaped filters (C fits inside B) after each wash cycle. Remove them both by lifting the outer one (B) up.
Then remove the inner one (C) by squeezing the two plastic tongues at the bottom of the outer filter (B) (Fig. 16).
Remove any food scraps and clean thoroughly with a stiff saucepan brush and hot sudsy water.
The large fine mesh filter (A) is cleaned automatically during the wash cycle by two extensions on the bottom spray arm (Fig. 16). These extensions direct two jets of water down the filter which wash any food debris into the conical filter where they are trapped. However the filter should be removed and thoroughly cleaned every now and then. To remove the filter (A), first take off the bottom spray arm by releasing the catches (D - Fig. 17) and lifting it up. Release the filter by turning the base of the spray arm (E - Fig. 17) in an anti-clockwise direction, then lift it out.
Clean with a stiff saucepan brush and hot sudsy water. Replace the filters and the spray arm making sure that all the parts are securely in position.
Important
Never use the dishwasher unless the filters and spray arm are firmly in the correct position.

Cleaning the Spray Arm Nozzles

The holes in the spray arm nozzles must be kept free of debris for the efficiency of the washing action.
Inspect the spray arms regularly. When thorough cleaning is necessary remove the bottom spray arm by releasing it from its securing catches and pulling it out (see fig. 17).
Wash the spray arm in hot sudsy water, using a stiff saucepan brush if necessary to remove scraps.
Reassemble carefully, making sure the catches are secure.
To clean the top spray arm and nozzles, slide out the top basket, then unhook the spray arm from the central support (see fig. 14). Remove and wash the parts as above.
Reassemble the parts carefully.

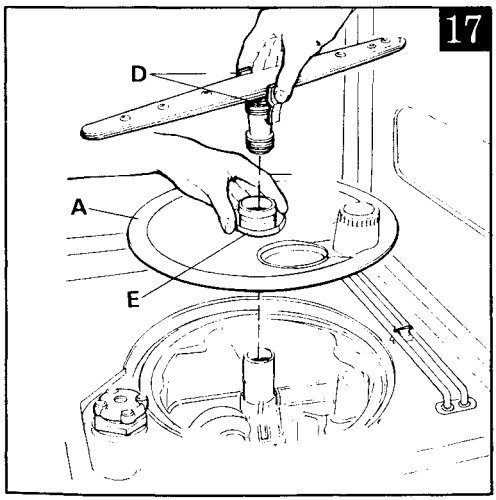

Cleaning the Cabinet

Wipe the outside of the cabinet and control panel regularly with a soft damp cloth. When necessary use a liquid kitchen or household cleaner to remove bad marks, rinse with a damp cloth and rub up with a soft duster. Never use abrasive cleaners which could damage the surface.

Care should be taken when cleaning the bottom door seal and hinge area as any exposed metal edges may cut if care is not observed.

If the machine is not going to be used for some time take the following precautions:

Unplug the machine and turn off the water supply.

Fill up the rinse aid container.

Make sure that the tub is clean by carrying out the Rinse and Hold programme and then dry the inside thoroughly.

Leave the door ajar.

Making the most of your Machine

- Be careful always to load the racks correctly.
- It is more economical and efficient to wash a full load of crockery etc than a half one, even if you only have to do this once a day.
- Load the baskets immediately after clearing the table. If the crocks etc are greasy and there are not enough to justify doing a full cycle, set the machine to do the Rinse and Hold programme.
- Once the machine is full, select the correct programme and wash a load.
- If you have to buy more crockery, pots and pans check that they are «dishwasher proof». This will be marked on the crockery, on the packing material, or in the brochure or leaflet. If in doubt ask the retailer.
- Silver tableware and cutlery can be washed safely in the dishwasher but make sure it is not touching any stainless steel items. If it is, there could be a chemical reaction between the two metals caused by the oxidizing effect of soapy water resulting in spots on the silver.
As a precaution never put silver and stainless steel in the same basket.
- Saucepans and casseroles with burnt on food should be soaked before you put them in the machine and the worst of the soil should be removed as it soaks off.
- Saucepans and casseroles free of burnt on food can be machine washed very satisfactorily.

Do Not Put the Following in Your Dishwasher

- Cutlery with wooden or horn handles or glued parts.
- Saucepans with wooden handles unless they are sold as dishwasher proof.
- Aluminium ware.
- Crystal ware.
- Plastic articles unless they are sold as dishwasher proof — if you do not know don't risk it as the plastic may soften and the article will be distorted and spoiled.
- Fine decorated and antique china. Most modern china has what is known as underglaze decoration and this is usually dishwasher proof but you should always check. Old china and some modern fine china has overglaze decorations which can wash off in a dishwasher so don't take risks if you have not got the manufacturer's assurance.

Servicing

If, having followed these instructions carefully, your machine fails to work properly, contact your local Zanussi Service Network. Before you do that, though, it is worth making a few simple checks yourself.

If the machine won't start...

- Make sure the appliance is properly plugged in and that the socket switch is in the «on» position.
- Check that there is power in the socket, by plugging in an appliance which you know to be working — a small lamp for example. If this too fails to work, check the main circuit fuses in your home's consumer unit or the main fuse box.
- Make sure the water tap is fully open.
- Check that the door is firmly shut.
- Check that you have pressed the start button.

If the machine won't fill...

- Make sure taps and stop cocks are turned on.
- Make sure the supply hose/hoses are not sharply bent.

If the machine won't drain...

- Check that the drain hose is not bent, blocked, or obstructed in any other way.
- Make sure that the filter is not clogged.

If the crockery does not come out clean...

- Make sure that you are using a detergent specially made for dishwasher.
- Make sure that you are using enough detergent.
- Check that you have loaded the crockery etc correctly.
- Check that the spray arms are able to turn freely and that the nozzles are not blocked or obstructed.
- Make sure that the filter is clean.

If you find the crockery streaked with lime deposits...

- Check that there is enough salt in the container.
- Check that there is enough rinse aid in the container.
- Make sure that the quantity of rinse aid being dispensed is sufficient (see page 12).

If you find traces of tea and coffee or lipstick left on the crockery...

- Make sure you are using enough detergent.

If you think that the crockery or cutlery has a salty taste...

• Make sure that the cap of the salt container is tightly screwed down.

The crockery is not completely dry

• If the crockery remains in the machine for a long period of time after washing, condensation may occur on the inner walls of the dishwasher and on the crockery itself.

If the machine vibrates badly or is too noisy...

• Check that the machine is absolutely level.

IN-GUARANTEE CUSTOMERS SHOULD ENSURE THAT THE ABOVE CHECKS HAVE BEEN MADE AS THE ENGINEER WILL MAKE A CHARGE IF THE FAULT IS NOT A MECHANICAL OR ELECTRICAL BREAKDOWN.

*** Please note that proof of purchase is required for any in-guarantee service calls.**

Building-in Features

This dishwasher is designed to be fitted under a kitchen counter or sink, alternatively to be completed with a specially made work-top.
In either case, it is essential that the recess dimensions indicated in Fig. 18 are followed.
This model incorporates levelling feet which enable adjustment of the height of the appliance between 820 and 870 mm.

To adjust the machine to the maximum height, unscrew and remove the feet. Then screw on the enclosed screw nuts «A» and refit the feet (fig. 19).
Adjust the height and tighten the screw nuts.
No special openings or systems are required to ventilate the machine, but only to let the electric supply cable and the water fill and drain hoses through.
When building the machine into a kitchen unit, make sure that the water fill and drain hoses are not bent or kinked.
The back of the machine may rest directly against the rear wall of the recess.

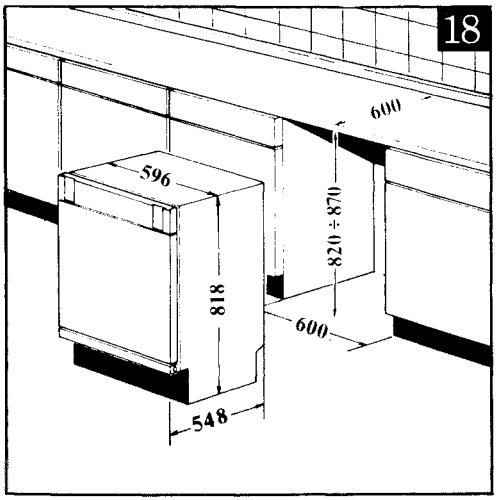

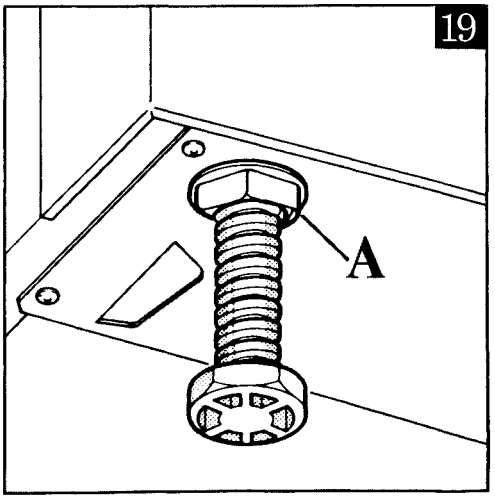

Important:
When the dishwasher is secured to the kitchen cabinets, be sure not to drill any holes into the sides of the machine to avoid damaging the hydraulic components located between the wash tub and the cabinet.
To connect the machine to the electricity and water supply, be sure to follow the rules and regulations detailed in this operator's handbook.

Warning

It is absolutely essential that the appliance is disconnected from the electricity supply before gaining access to any internal component.

Fitting and securing under a counter (kitchen sink or counter)

To fit the dishwasher under a kitchen sink proceed as follows:

insert the appliance under the sink after correctly adjusting its height and levelling it as required by means of its adjustable levelling feet;

secure the mounting brackets (A - fig. 20) to the front part of the dishwasher and sink by means of screws.

In case of fitting under a kitchen counter, the two front mounting brackets must be secured to the counter work-top as shown in Fig. 21.

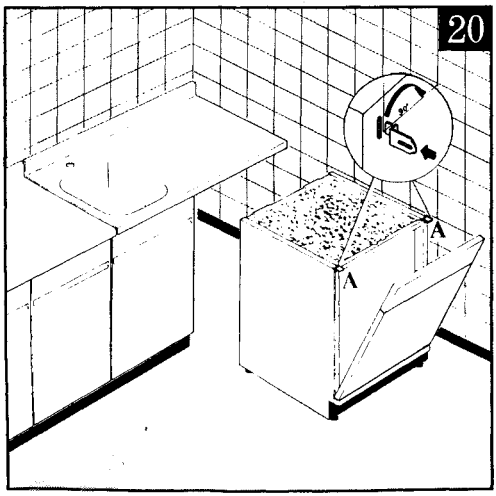

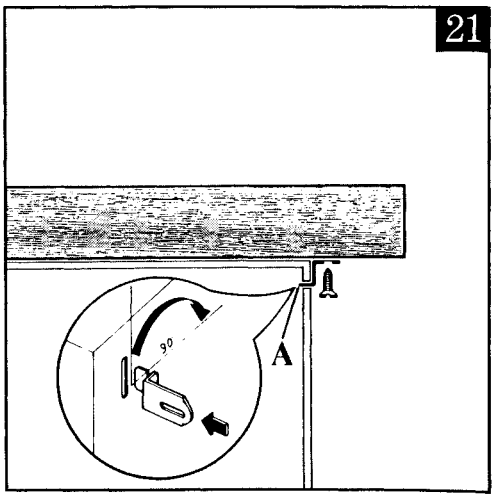

Instructions for fitting furniture door onto door

Door and facia panel of this model can be completely concealed by means of a wooden door panel. This allows a perfect aesthetical alignment with the kitchen units.

Decor panel dimensions:

Width	598 mm max
Height	644 ÷ 714 mm max
Thickness	15 ÷ 21 mm max

Preparation of the decor panel

The height of the door panel depends on the height of the kick plate. The panel must be provided with a handle, as the handle of the appliance will be covered by the panel.
Mount bottom brackets and plastic guides onto the panel as per fig. 22.

To facilitate possible adjustments it is recommended that the brackets are temporarily mounted on the slotted holes and that a mounting test is made prior to permanently secure them to the panel.

Mounting the Panel onto the Appliance Door

Close the door. Insert the upper plastic guides in the special openings on the control panel (fig. 23).

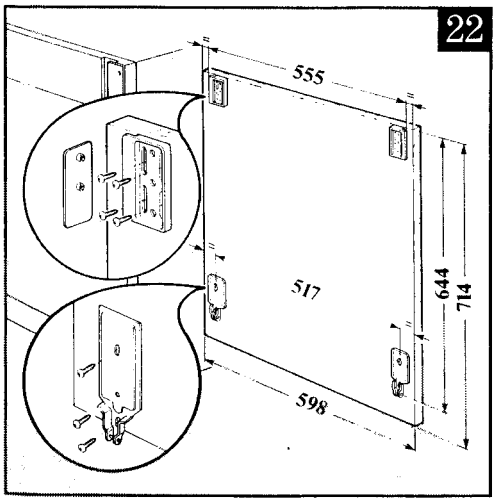

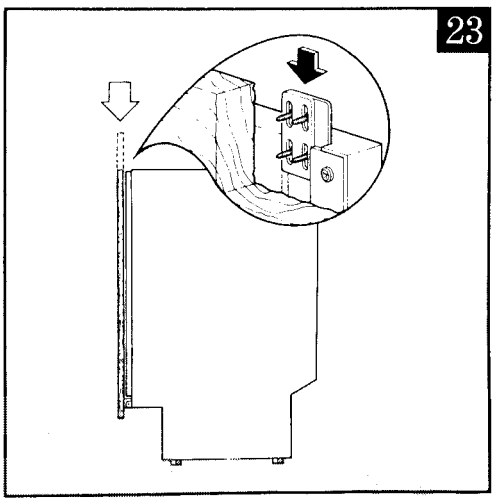

Hold appliance door and panel together and carefully open the door at an angle of approx. 90°. Exert a pressure at the bottom of the panel to hook panel pivots into the special hooks at the door's bottom (fig. 24) (press until a click is heard).

Check that the guides slide properly inside the facia panel when the door is opened or closed.
Rectify if necessary.
Once the correct position has been found, remove the door panel and secure definitively the bottom brackets.

Removal of the Front Panel

Open the door at an angle of approx. 90°.

With a screwdriver push the two hooks at the bottom of the panel until the panel is released (fig. 25).
Take out the panel by pulling it upwards.

Attention: Hold the panel with the hand in the bottom part to prevent it from dropping.

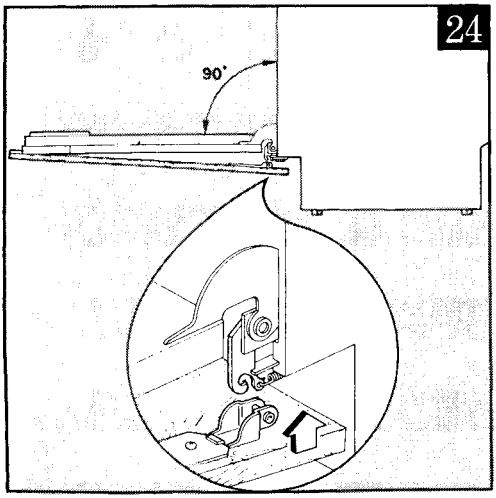

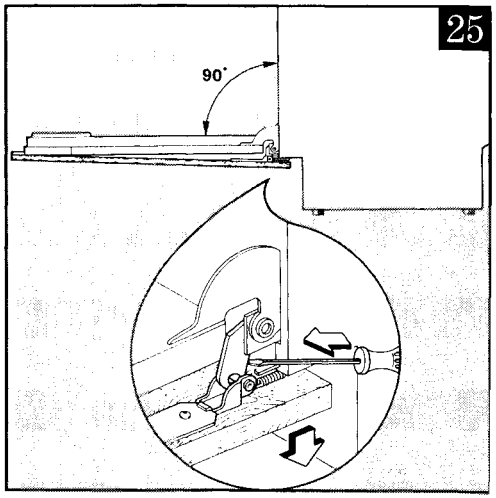

Adjusting the door balance

Fitting the decor panel may sometimes affect the door balance due to the different load placed on the same. In this case it will be necessary to adjust the balance by regulating the appropriate nuts «A» provided on the back of the machine near the rear feet. By screwing or unscrewing these nuts the tension of the door balancing springs is increased or decreased respectively (fig. 26).

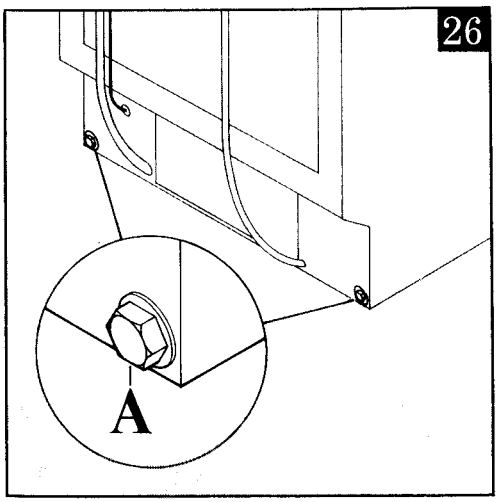

How to find the telephone number of your

Zanussi Service Force

listed in this leaflet

Zanussi Service areas are allocated by postcodes which are listed in alphabetical order for easy reference.

1. Look for the two letters of your address postcode in the far left 'Postcode' column.

2. Match up the number of your postcode against the number listed in the 'Postcode Numbers' column.

3. Look across the column to the Service Force Key Number for your area. Turn to the last page of this directory for the address and telephone number to contact for service which is listed against your key number.

If you are unsure of your postcode, the main towns and cities are listed in alphabetical order for easy reference.

Additionally, your local Zanussi Service Force Centre telephone number is listed under 'Z' in your telephone directory.

The Customer Care Department at Zanussi House, Hambridge Road, Newbury, RG14 5EP, Tel: 0635 521313, will be happy to help you with any queries or difficulties.

For Service in the Republic of Ireland
The telephone number of your service centre can be found in your Local Telephone Directory under "Elektro Service" or "Zanussi". The information can also be found in the Golden Pages under "Electrical Appliances - Repairing".

Post-code Letter	Town	Post-code Number	Service Force Key Number
AB	Aberdeen	1-5, 22-23, 30-38	1
AB		41-45, 51-56	1
AL	St Albans	1-10	2
A	Brecon	45	3
BA	Bath	1-5, 11-15	4
BA		7-10, 20-22	5
BA		6, 16	6
BB	Blackburn	1-12	7
BD	Bradford	1-23	8
BD		24	7
BH	Bournemouth	1-25	9
BL	Bury	0-9	11
BN	Brighton	1-15,	12
BN		20-27	12
BN		16-18	13
BR	Bromley	1-8	14
BS	Bristol	1-28, 88-89	15
BT	Belfast	1-82	16
B	Birmingham	1-21, 25-33, 38, 40,	17
B		45, 47-48, 60-71	17
B		80, 90-94, 97-98	17
B	Birmingham	23-24, 34-37,	18
B		42-44, 46, 72-	18
B		79	18
B	Birmingham	49-50,	20
B		96	19
B	Birmingham	95	20
CA	Carlisle	1-28	21
CB	Cambridge	1-8	22
CB		9-11	23
CF	Cardiff	1-8, 31-48	3
CH	Chester	1-4	24
CH		5-7	25
CH		8	26
CM	Chelmsford	0-6, 8-9, 11-15	27
CM		7	23
CM	Chelmsford	16-24	28
CO	Colchester	1-16	23
CR	Croyden	0-9	29
CT	Canterbury	1-21	36
CV	Coventry	1-8, 10-12, 21-23,	20
CV		9, 13	18
CV	Coventry	31-37	20
CW	Crewe	1-12	30
DA	Dartford	1-18	29
DD	Dundee	1-5, 7-11	31
DD		6	32
DE	Derby	1-3, 6-7, 13-15	10
DE	Derby	11-12	18
DE	Derby	4-5, 55	33
DG	Dumfries	1-7, 10-12, 14	34
DG		8-9	34
DG	Dumfries	13	35
DH	Durham	1-9	37
DL	Darlington	1-17	37
DN	Doncaster	1-7, 10-12, 22	33
DN		14	38
DN	Doncaster	8-9, 15-21, 31-40	39
SUB POSTCODE DIVISION			
DN	Gainsborough		
	South	21-1, 21-2, 21-5	40
DN	Gainsborough		
	North	21-3, 21-4	39
DT	Dorchester	1-5, 10-11	9
DT		6-9	5
SUB POSTCODE DIVISION			
DT	Bridport East	6-3, 6-4	5
DT	Bridport West	6-5, 6-6	5
DY	Dudley	1-6, 8-9	17
DY		7, 10-14	41
EC	London	All **EC** Codes	28
EH	Edinburgh	1-42, 46, 52-54	42
EH		43-45	35
EH	Edinburgh	47-49, 51, 55	43
EN	Enfield	1-11	28
EX	Exeter	1-17, 20	45
EX		18-23, 31-39	46
E	London	All **East** Codes	28
FK	Falkirk	1-4	43
FK		10-14, 18-19	32
FK	Falkirk	5-9, 15-17	47
FK		20-21	31
FY	Fleetwood	0-8	7
GCI	Guernsey		48
GL	Gloucester	1-19,	49
GL		50-56	49
GL		20	19
GU	Guildford	1-24, 26, 34-35	50
GU		25	51
GU	Guildford	27-33	13
G	Glasgow	1-5, 11-15, 20-23,	47
G		31-34, 40-46, 51-	47

Post-code Letter	Town	Post-code Number	Service Force Key Number
G	Glasgow	53, 58, 60-69, 73,	**47**
G		76-78, 81-84	**47**
G	Glasgow	71-72, 74-75	**43**
HA	Harrow	0-9	**2**
HD	Huddersfield	1-8	**8**
HG	Harrogate	1-5	**8**
HP	Hemel	1-3	**2**
HP	Hempstead	4-23	**53**
HR	Hereford	1-2, 4, 6-9	**49**
HR		3, 5	**54**
HU	Hull	1-20, 55	**38**
HX	Halifax	1-7	**8**
IG	Ilford	1-11	**28**
IOM	Isle of Man		**55**
IP	Ipswich	1-15, 30-31	**56**
IP		16-27	**57**
IP	Ipswich	28-29, 32-33	**22**
IV	Inverness	1-24, 26, 30-36,	**58**
IV		40-49, 51-56	**58**
IV	Inverness	25, 27-28	**59**
JCI	Jersey		**60**
KA	Kilmarnock	1-26, 28-30	**43**
KA		27	**61**
KA		28	**68**
KT	Kingston-on-Thames	1-23	**51**
KT		24	**50**
KW	Wick	1-14	**59**
KW		15-17	**62**
KY	Kirkcaldy	1-16	**32**
LA	Lancaster	1-23	**7**
LD	Llandrindod	1-8	**54**
LD		3	**3**
LE	Leicester	1-5, 7-8, 11-14,	**63**
LE		16-17	**63**
LE	Leicester	6, 9-10	**63**
LE		15	**64**
LL	Llandudno	11-15	**25**
LL		16-19	**26**
LL	Llandudno	20-21, 23, 27, 31-	**25**
LL		32, 34-40, 42-47	**25**
LL	Llandudno	22, 24-26, 28-30,	**26**
LL		33-34, 41, 48-49,	**26**
LL		51, 78	**26**
LN	Lincoln	1-6, 8-10	**40**
LN		7, 11-13	**39**

Post-code Letter	Town	Post-code Number	Service Force Key Number
SUB POSTCODE DIVISION			
LN	Lincoln	3-4, 3-5	**40**
LN		3-6	**39**
LS	Leeds	1-29	**8**
LU	Luton	1-6	**2**
LU		7	**22**
L	Liverpool	1-49, 60-70	**24**
ME	Medway	3	**29**
ME		1-2, 4-20, 99	**36**
MK	Milton Keynes	1-17, 19, 40-46	**22**
MK		18	**65**
ML	Motherwell	1-12	**43**
M	Manchester	1-35, 60	**11**
NE	Newcastle-on-Tyne	1-49, 61-70, 88	**66**
NE		98-99	**66**
NE		71	**35**
NG	Nottingham	1-14	**10**
NG		15-22, 25	**33**
NG	Nottingham	23-24	**40**
NG		31-34	**64**
NN	Northampton	1-7, 11-12	**67**
NN		8-10, 14-18	**22**
NN	Northampton	13	**65**
NP	Newport	1-9, 44	**3**
NR	Norwich	1-35	**57**
NW	London	All **NW** Codes Except 2, 4, 7, 9, 10	**52**
NW	London	2, 4, 7, 9, 10	**2**
N	London	All **N** Codes	**28**
OL	Oldham	1-12, 15-16	**11**
OL		13-14	**7**
OX	Oxford	1-17	**65**
PA	Paisley	1-4	**47**
PA		5-19	**43**
PA	Paisley	20-27	**68**
PA		28-29, 41-49, 60-61	**69**
PA		30-40	**70**
PA		62-78	**68**
PA	Paisley	80-82, 88	**71**
PA		83-87	**72**
PE	Peterborough	1-15, 34, 38	**64**
PE		16-19	**22**
PE	Peterborough	20-25	**40**
PE		30-33, 35-37	**57**
PH	Perth	1-2, 8-9, 10-18	**31**
PH		3-7	**32**

Post-code Letter	Town	Post-code Number	Service Force Key Number
PH	Perth	19-26, 30-44	**58**
PL	Plymouth	1-21	**73**
PL		22-35	**74**
PO	Portsmouth	1-22	**13**
PO	I O.W.	30-41	**75**
PR	Preston	1-9	**7**
RG	Reading	1-17, 26	**53**
RG		21-25, 27	**50**
RG	Reading	28	**4**
RH	Redhill	1-3, 6-7, 9-20	**12**
RH		4-5	**50**
RH	Redhill	8	**29**
RM	Romford	1-5, 7, 10-18	**27**
RM		6, 8-9	**28**
SA	Swansea	1-18, 31-32	**3**
SA		33-39, 41-44, 61-73	**76**
SA	Swansea	19-20, 40, 45-48	**77**
SE	London	All **SE** Codes	**14**
SG	Stevenage	1-9, 11, 15	**2**
SG		10, 12-14	**28**
SG	Stevenage	16-19	**22**
SK	Stockport	1-3, 6-12	**30**
SK		4-5, 13-16	**11**
SK	Stockport	17	**33**
SL	Slough	1-10	**53**
SM	Sutton	1-3, 7	**51**
SM		4-6	**29**
SN	Swindon	1-8, 11-16	**65**
SN		9-10	**4**
SO	Southampton	1, 4, 41-43, 51	**9**
SO		2-3, 5, 21-24, 52	**13**
SO	Southampton	20	**4**
SP	Salisbury	1-5, 9-11	**4**
SP		6	**9**
SP	Salisbury	7-8	**9**
SR	Sunderland	1-7, 9	**66**
SR		8	**37**
SS	Southend-on-Sea	0-9, 11-17, 99	**27**
ST	Stoke-on-Trent	1-18, 20-21	**30**
ST		19	**18**
SW	London	2, 4, 8-9, 12, 16-17	**14**
SW	London	1, 3, 5-7, 10-11	**44**
SW	London	13-15, 18	**44**
SW	London	19-20	**51**
SY	Shrewsbury	1-6, 9-17, 18-22	**25**
SY		7, 17-19	**54**
SY	Shrewsbury	8	**41**
SY		23-25	**77**
S	Sheffield	1-19, 30-31, 40-45	**33**
S		60-66, 74, 80-81	**33**
S	Sheffield	70-73, 75	**8**
TA	Taunton	1-11, 21-24	**6**
TA		12-20	**5**
TD	Selkirk	1-15	**35**
TF	Telford	1-8, 10-13	**41**
TF		9	**30**
TN	Tonbridge	1-2, 4, 8-11, 13-16	**29**
TN	Tonbridge	12, 17-19, 23-40	**36**
TN	Tonbridge	3, 5-7	**12**
TQ	Torquay	1-6, 9, 12-13	**78**
TQ		7-8	**73**
TQ		14	**45**
TR	Truro	1-27	**74**
TS	Stockton-on-Tees	1-29	**37**
TW	Twickenham	1-20	**51**
UB	Uxbridge	1-10	**2**
WA	Warrington	1-5, 8-9, 10-15	**11**
WA		6-7	**24**
WA	Warrington	16	**30**
WC	London	All **WC** Codes	**44**
WD	Watford	1-2, 4-7	**2**
WD		3	**53**
WF	Wakefield	1-17	**8**
WN	Wigan	1-5, 7	**11**
WN		6, 8	**24**
WR	Worcester	1-14	**19**
WR		15	**41**
WS	Walsall	1-15	**18**
WV	Wolverhampton	1-4, 10-14	**18**
WV		5-9, 15-16	**41**
W	London	All **West** Codes Except 1-14	**52**
W	London	3, 4, 5, 7, 13	**2**
W	London	1-2, 6, 8-12, 14	**44**
YO	York	1-3, 5, 7-8	**8**
YO		4, 6, 11-18, 25	**38**
YO	York	21-22	**37**
ZE	Lerwick	1, 3	**79**
ZE		2	**80**

Service Force Key Number	Service Force Address	Telephone Number
1	60 Commerce Street, Aberdeen, AB2 1BP	0224 583949
	or Tel:	0224 582704
2	Unit 4, Riverside Est, Coldharbour Ln, Harpenden	0582 461909
3	3 Pentwyn Road, Blackwood, Gwent, Sth Wales	0495 223151
4	31 St Andrews Road, Bemerton, Salisbury, SP2	0722 336072
5	3 Bancombe Ct. Trad. Est., Martock, Yeovil, TA12	0935 822836
6	6 Hamp Ind Est. Bridgwater, Somerset, TA6 3NT	0278 424550
7	333 Ranglet Road, Walton Summit, Preston, PR5	0772 321200
8	57 Ingram Road, Holbeck, Leeds, Yorks,	0532 460992
9	63 Curzon Road, Bournemouth, BH1 4PW	0202 303363
10	Unit 2, Furnace Road, Ilkeston, Derbyshire	0602 442770
11	Unit 41/42 Clarendon Ct, Winwick Quay, W'ton	0925 50822
12	Unit 3, 21/25 Bridge Road, Haywards Heath, RH1	0444 417656
13	266 Main Road, Southbourne, Emsworth, PO10	0243 374814
	or Tel:	0243 371170
14	9, Bourne Road, Bromley, Kent, BR2 9PB	081 313 9533
15	Unit 1, Albert Crescent, Bristol, BS2 0YH	0272 713217
16	Owenmore Hse, Kilwee Ind. Est., Upper Dunmurry Lane, Belfast	0232 301121
17	66 Birch Rd East, Wyreley Rd Ind. Est, B'ham	021 327 1671
18	Unit 3 Sterling Park, Claymore, Tamworth	0827 289800
	or Tel:	0827 289822
19	22 Newton Road, Malvern, Worcester, WR141NZ	0684 572915
20	Unit 23/24, Alliance Business PK, Townsend Drv, Nuneaton, CV11	0203 350666
21	High Ehenside, Egremont, Cumbria, CA22	0946 820509
22	1 Wharf Road, Higham Ferrers, Northants	0933 317727
23	Unit 2b, Elton Park Business Centre, Hadleigh Road, Ipswich, IP2 1 DQ	0473 211713
24	Unit 14, Dock Road, Birkenhead, L41 1JJ	051 639 1287
25	Plas Fynnon W/house, Middleton Rd, Oswestry	0691 652917
26	Easy Launderette, Panton Hall, Denbigh, Clwyd	0745 81 3272
27	19 Sirdar Rd, Off Brook Rd, Rayleigh, Essex	0268 741171
28	284 Alma Road, Enfield, EN3	081 805 6825
29	Unit B4, Imperial Bus. Estate, Gravesend, Kent	0474 353771
30	Unit 8, Croft Road, Newcastle under Lyme, Staffs, ST5 0TW	0782 713003
31	3-7 Blackness Street, Dundee, Scotland, DD1	0382 642828
	or Tel:	0382 455862
	or Tel:	0382 826809
32	33a Burnside, Auchtermuchty, Fife, Scotland	0337 28807
33	Unit 63, Storforth Ln Trad. Est. Chesterfield	0246 231790
34	93 Irish Street, Dumfries, Scotland	0387 69694
35	2-8 Wood Market, Kelso, Borders, TD5 7AX	0573 24411
36	Unit 2, Bridge Rd Bus. Centre, Bridge Road Ashford, Kent, TN23 1BB	0233 613463
37	8 Cumbie Way, Aycliffe Ind. Est. Newton Aycliffe	0325 300606
38	Unit 1, Boulevard Unit Fact. Est. Hull, HU3 4AY	0482 223335
39	Unit 2, Cromwell Road, Grimsby, DN31 2BN	0472 358760
40	Unit 14 Stonefield Park, Clifton Street, Lincoln	0522 532330
41	1 Underhill Street, Bridgnorth, Salop, WV16	0746 763322
42	38 Buccleuch Street, Dalkeith, Midlothian, EH22	031 663 7758
43	Block 2 Unit 5, Auchenraith Ind. Est. Rosendale Way, Blantyre	0698 828145
44	4 Royal Lane, Yiewsley, W-Drayton, UB7	0895 441917
45	91 Exeter Road, Exmouth, Devon, EX8 1QD	0395 263531
46	Unit 4, Upcroft Ave, Pottington Ind Est, Barnstaple	0271 71774

Service Force Key Number	Service Force Address	Telephone Number
47	Unit E6C Anniesland Ind. Est. Netherton Rd, Glasgow, Scotland	041 954 5304
	or Tel:	041 954 5349
48	Blencathra, Saumarez Lane, Castel, Guernsey	0481 56854
49	134 Eastgate Street, Gloucester, GL1 1QT	0452 422488
50	Unit 1 Redfields Ind. Pk, Church Crookham, Fleet	0252 851414
51	127 Walton Road, Molesey, Surrey, KT8 0DT	081 9796366
	or Tel:	081 9797962
52	Unit 4, Riverside Est, Coldharbour Ln, Harpenden	0582 461909
53	Reform Road, Maidenhead, Berkshire	0628 783711
54	Merion House, High Street, Llandrindod Wells	0597 824842
55	South Quay Industrial Estate, Douglas, I.O.M.	0624 622114
56	Unit 2b, Elton Park Business Centre, Hadleigh Rd, Ipswich, IP2 0DQ	0473 211713
57	75 Grove Road, Norwich, NR1 3RL	0603 629653
58	Unit 3B3, Smithton Ind. Est. Smithton, Inverness	0463 791822
59	Drummuie Road, Golspie, Sutherland, KW10 6SY	0408 633517
60	P.O.Box 45, Queens Road, St Helier, Jersey	0534 67001
61	Bruach, Blackwaterfoot, Isle of Arran	077 086 246
62	Hatson Ind. Estate, Kirkwall, Orkney	0856 5457
63	75 St Marys Road, Market Harborough, Leics	0858 433229
64	Pinfold Rd, Manning Rd Ind. Est. Bourne, Lincs	0778 422147
65	Unit E19, Telford Rd, Launton Ind. Est. Bicester	0869 248598
66	Unit C1, Bergen Cl, Tyne Tunnel Trad. Estate, North Shields, Tyne & Wear	091 2960166
67	53 Sandringham Road, Northampton, NN1	0604 37061
68	96 Argyll Street, Dunoon, Argyll, PA23 7NE	0369 2147
69	Inverasdale, Gallow Hill Rd, Cambeltown, Argyll	0586 553753
70	Moss Field Workshop, Moss Field Drive, Oban	0631 664530
71	2 Killweivagh, Gregory, Benbecula, Outer Hebrides	0870 2331
72	Churchouse, 16 James St, Stornaway, Isle of Lewis	0851 705555
73	16 Faraday Mill, Cattedown, Plymouth, PL4	0752 257455
74	80 Killigrew Street, Falmouth, Cornwall, TR11	0326 314600
75	111 Hunnyhill, Newport, Isle of Wight	0983 523062
76	Roch, Haverfordwest, Dyfed	0437 710366
77	Unit 16, Llambed Ind. Est., Lampeter, SA48	0570 423424
78	278 Torquay Road, Preston, Paignton	0803 529969
79	3-4 Carlton Place, Lerwick, Shetland, ZE1	0595 2915
80	Harlsdale, Symbister, Whalasay, Shetland	08066 546
81	London House, Victoria Str., Alderney	048182 3563

PEACE OF MIND FOR TWENTYFOUR MONTHS

Zanussi guarantee conditions

This guarantee is in addition to your statutory and other legal rights which will not be excluded or in any way diminished by the return of this guarantee card.

We, Zanussi Ltd., undertake that if, within twentyfour months of the date of the purchase, this ZANUSSI appliance or any part thereof is proved to be defective by reason only of faulty workmanship or materials, we will, at our option, repair or replace the same FREE OF ANY CHARGE for labour, materials or carriage on condition that:

* The appliance has been correctly installed and used only on the electricity supply stated on the rating plate.
* The appliance has been used for normal domestic purposes only, and in accordance with the manufacturer's operating and maintenance instructions.
* The appliance has not been serviced, maintained, repaired, taken apart or tampered with by any person not authorised by us.
* The appliance is still in the possession of the original purchaser.

All service work under this guarantee must be undertaken by a Zanussi Service Force Centre.

Home visits are made between 8.30 am and 5.30 pm Monday to Friday. Visits may be available outside these hours in which case a premium will be charged.

Any appliance or defective part replaced shall become our property.

Exclusions

This guarantee does not cover:

* Damage or calls resulting from transportation, improper use or neglect, the replacement of any light bulbs or removable parts of glass or plastic.
* Costs incurred for calls to put right machines improperly installed or calls to machines outside the UK and the Republic of Ireland.
* Appliances found to be in use within a commercial or similar environment, plus those which are the subject to rental agreements.
* Products of Zanussi manufacture which are NOT marketed by Zanussi Ltd.
* EEC Countries - The standard guarantee is applicable but subject to the owner's responsibility and cost to ensure the appliance meets the standards set by the country to which the product is taken. The Zanussi company in the country concerned will be pleased to advise further. Sight of your purchase receipt will be required by them.

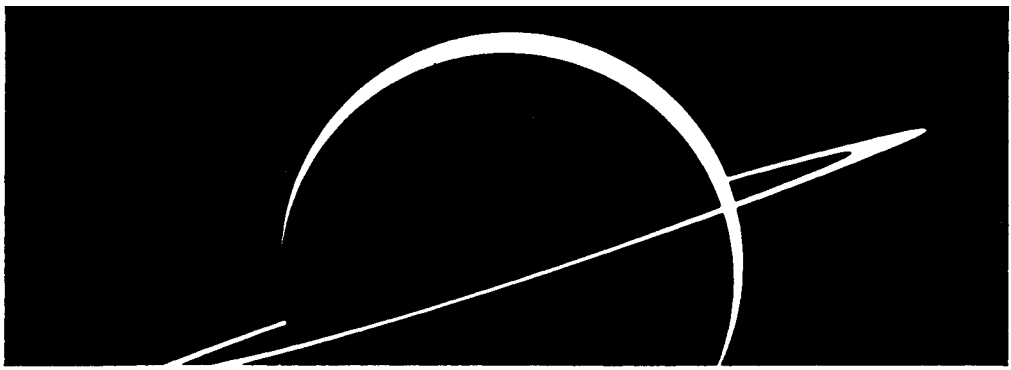

ZANUSSI

The appliance of science

Zanussi Ltd., Zanussi House, Newbury.

The information in this manual is correct at time of going to press.
Zanussi reserve the right to alter specifications without notice.

32292-685/5 ET 9 10 11 12/93